

REMOTE CONTROL

Easy and Convenient to Use

STOP

Stops washing or drying



REAR

Press once for a pleasant, concentrated spray.



FRONT

Press once for comfortable intimate washing.



 
 
WARM AIR DRYER

Blows warm air to aid drying.



PERSONAL SETTING

2 user personal memory settings.



TOTO

PRESSURE

Adjusts the water pressure for ideal comfort.

POSITION

Adjusts the position of the wand forwards or backwards.

PULSATING

Water pressure alternates between soft and strong for a massage effect.

OSCILLATING

The wand moves back and forth for a thorough cleanse.