
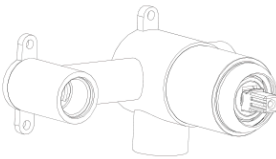
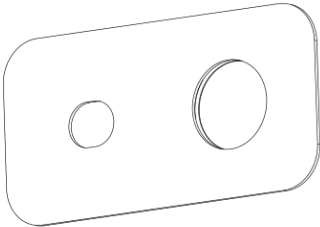
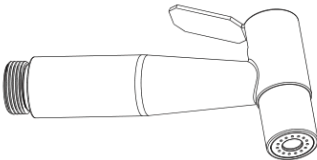
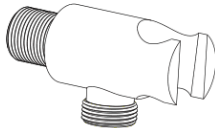
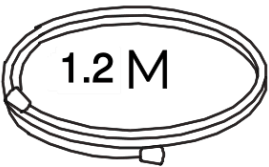


Model #H1901

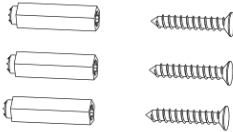


Parts list

A  x1	B 
C 	D 
E 	F 
G 	H 

POS	PART NAME	MATERIAL
A	Body	SUS304
B	Panel	SUS304
C	Spray gun	Assembly
D	Shower holder	SUS304
E	Handle	SUS304
F	Shower hose	Component
G	Hex key	SUS304
H	Installation Package	Assembly


Installation Steps

FIG1

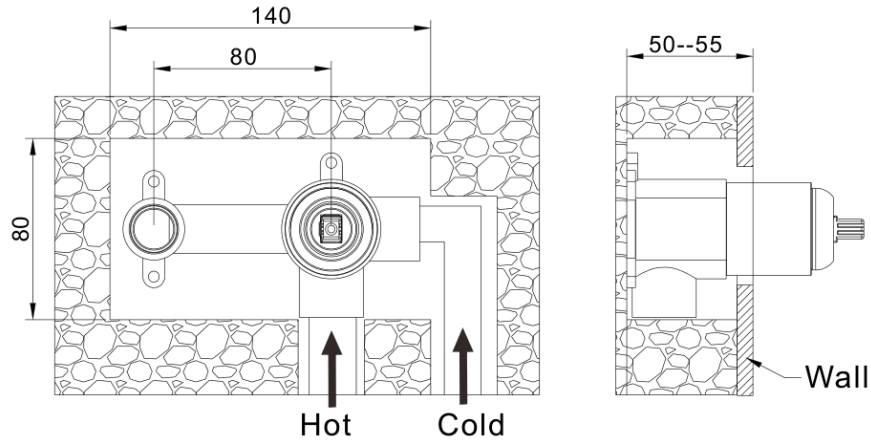


1. Drilling a 50-55mm depth square hole on the wall. The distance between embedded hole and outlet is 100mm, Put the main body into the hole.

FIG2

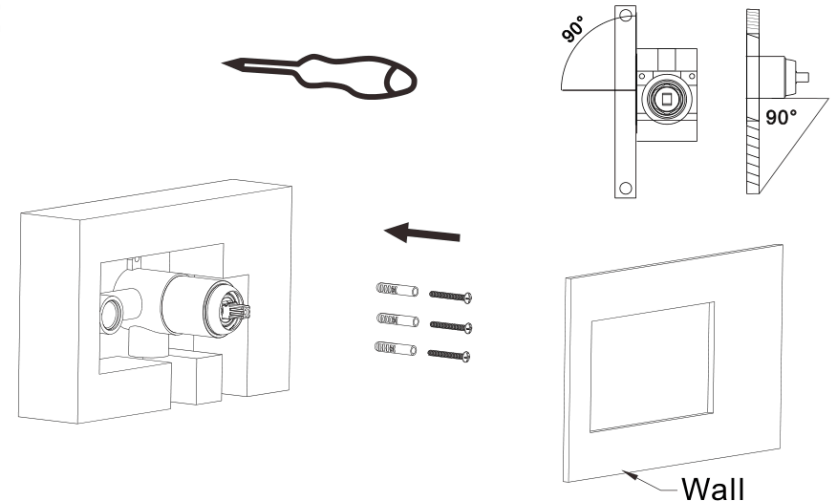


2. Connect the inlet and outlet water pipe as shown in the picture. After connecting the inlet and outlet water pipe, fix the main body in the reserved hole with screws. Make sure the installation is in the right position.

FIG3

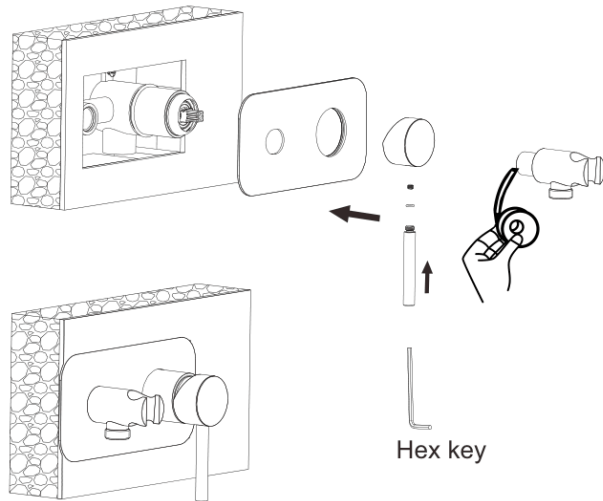

5. Fix the shower holder into the water outlet with screw. The direction of the shower holder is perpendicular to the ground. Install the panel and glue it in place, then install the handle.

FIG4

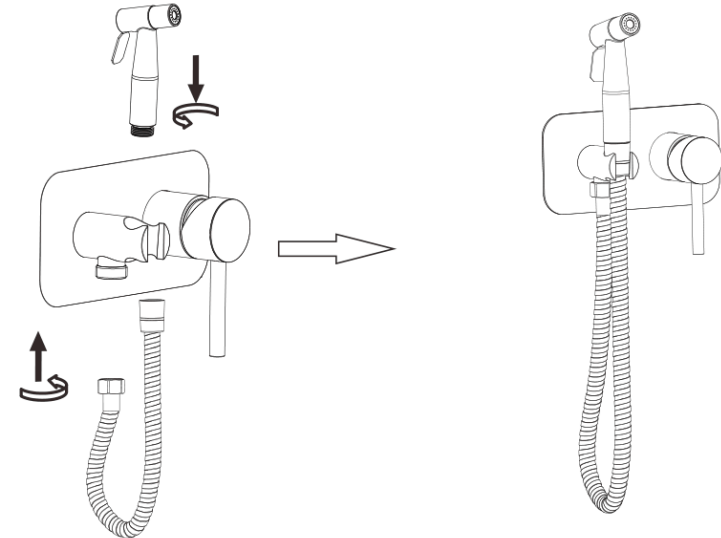

6. One end of the shower hose connected to the spray gun while the other end connected to the water outlet connector of the shower holder. After finishing above steps, turn on the angle valve to check whether there's leakage problem