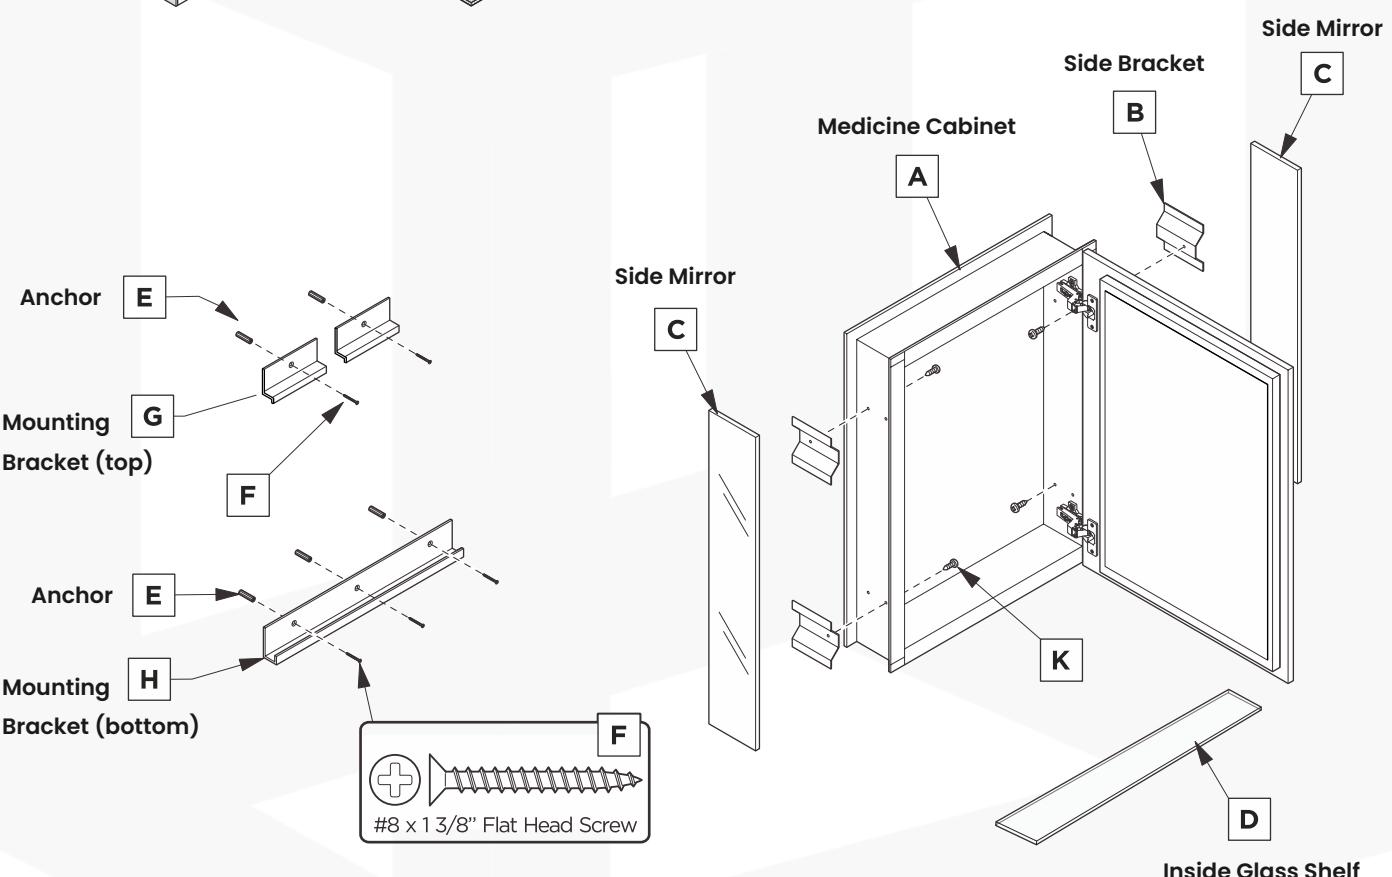
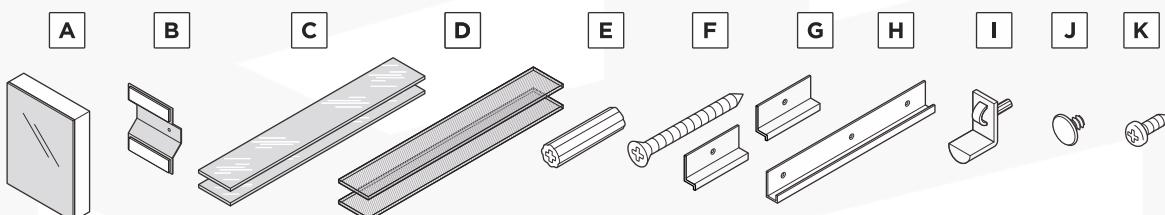


## Tools Required for Assembly



## Supplied Parts



### Warning

Risk of property damage. Use anchors rated for the load weight of this product.

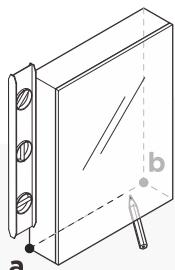
Refer to the anchor manufacturer's instructions.



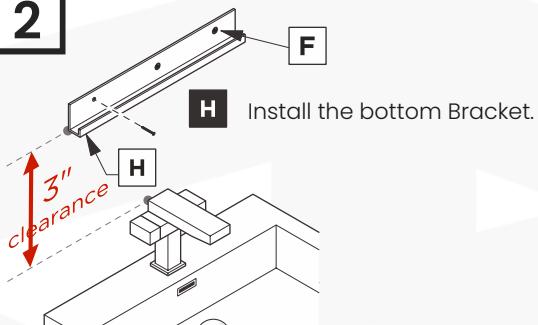
### Warning

Risk of electric shock. Avoid existing electrical wiring or plumbing when mounting this product to the wall.

## Surface Mount Installation

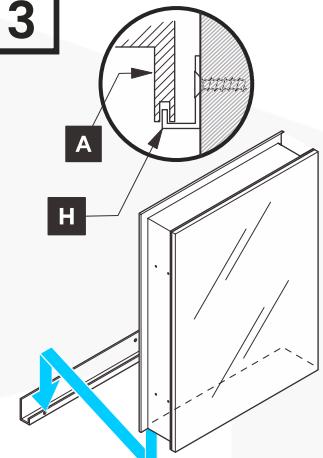
**1**


Level and mark the medicine cabinet location from point **a** to point **b**.

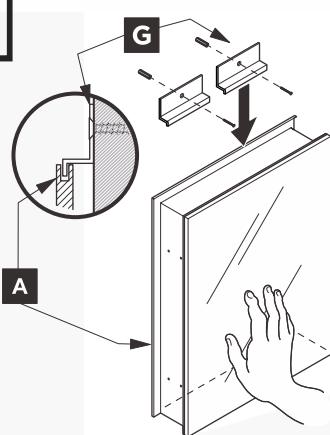
**2**


Consult an expert for the proper screw/bolts to use when attaching to various wall constructions.

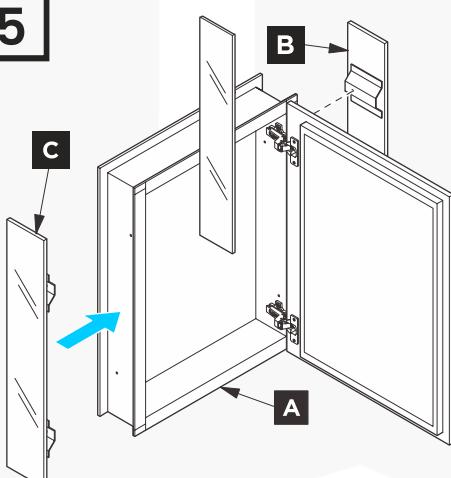
Screws provided do not attach to wall construction types.

**3**


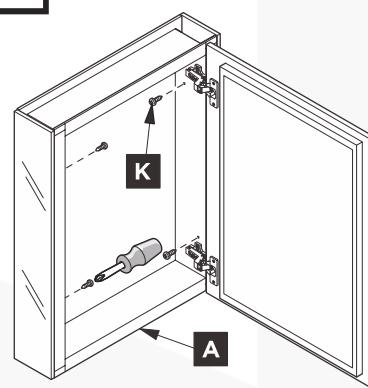
With assistance, rest the cabinet on the mounting bar and hold in place.

**4**


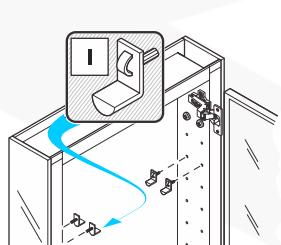
Hold the Cabinet then fit the top bracket (**G**) on the top of the cabinet then attach the bracket to the wall

**5**


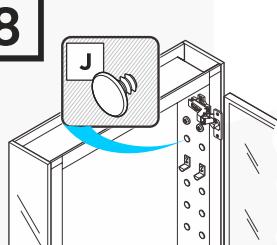
Align mirrored side panel (**C**) with each side of the cabinet.

**6**


Secure mirrored side panels with provided screws (**K**) using screwdriver.

**7**


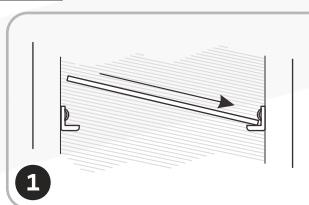
Push and twist the snap-in pins (**I**) into the place.

**8**


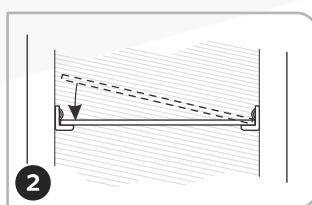
Fill remaining holes with the plugs (**J**).

**9**

for the optional door adjustments refer to the page 3.

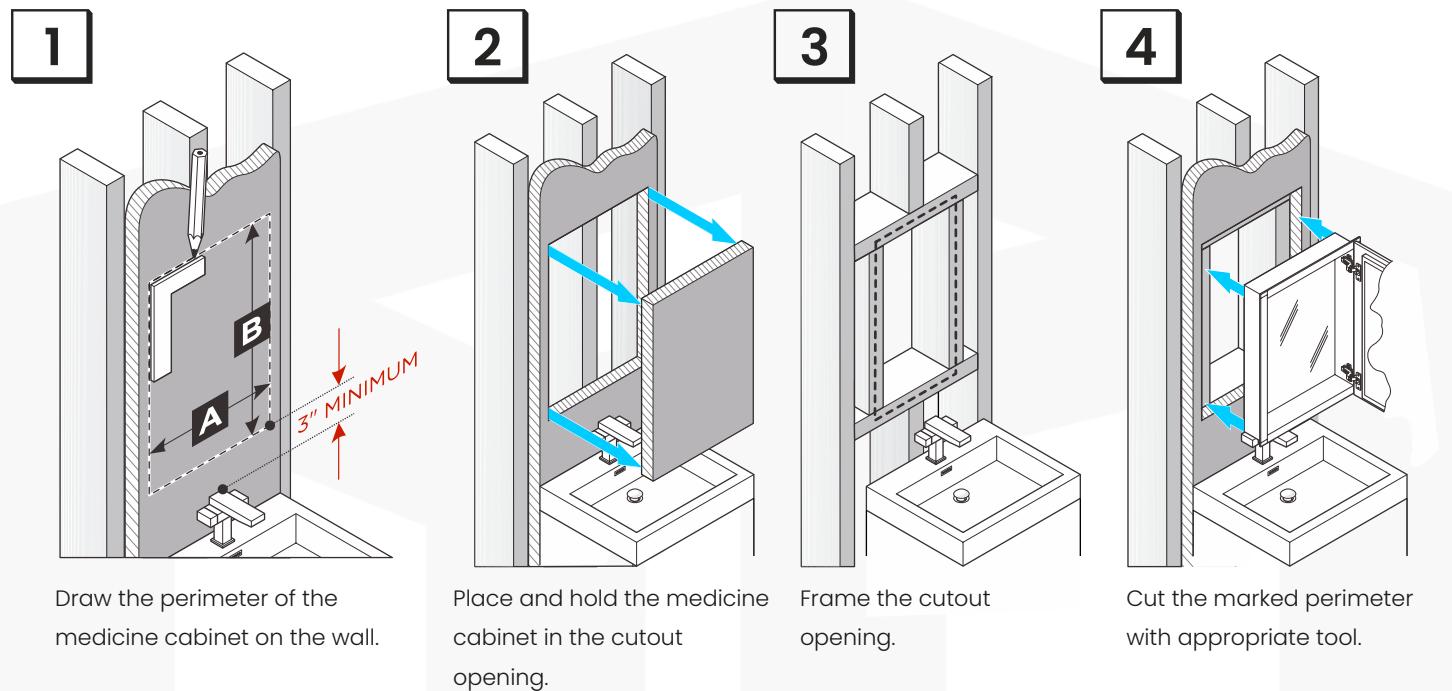


Push a side of the shelf (**D**) into left or right pins (**I**).



Push Snap the shelf (**D**) down into the opposite side.

## Recess-Mount Installation



### 4 STEPS TO FRAME THE CUTOUT OPENING

